

Downstream Pressure Control

Section Four

4



4.1	General Information	3
4.2	Throttling/Butterfly Valves & Universal Valve Drives	4
4.3	Throttle Valve/Resolvers	18
4.4	Throttling/Pendulum Valves	19
4.5	Throttling/Soft Shut Gate Valves	18
4.6	Adaptive Pressure Controllers	19
4.7	Capacitance Diaphragm Gauges	21
4.8	Accessories and Spare Parts	26

For further information,
contact your
local distributor.

To obtain a copy
of this manual,
please contact your
local distributor or
visit our website
www.foxvalve.com

For further information,
contact your
local distributor.

